



**ELITE SERIES  
ENCLOSURE INSTALLATION**

# ELITE Series Open Back Installation

- 1) With a stud finder find the position of the studs in the drywall and mark their location (Fig. 1)



Fig. 1

- 2) Determine the optimal placement for the enclosure, based upon your desired look

- 3) Remove the front grille from the Elite Case

- 4) Using the pilot holes located inside the case (top and bottom), drive 4 screws and washers (2 top / 2 bottom) into the pilot holes ensuring that you hit the marked stud locations (Fig. 2)

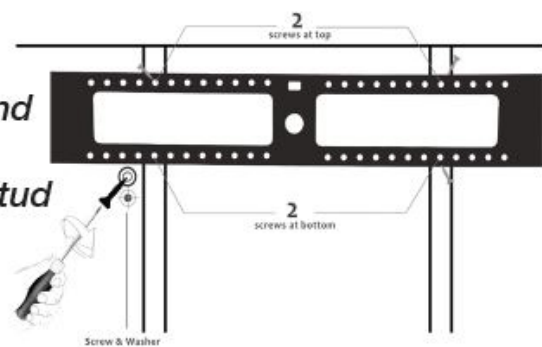


Fig. 2

- 5) If you are unable to hit studs, ensure you use appropriate hardware rated to support the load

- 6) Use the cable management notch to run the power cable, optical, ethernet and hdmi if applicable to the soundbar (Fig. 3)

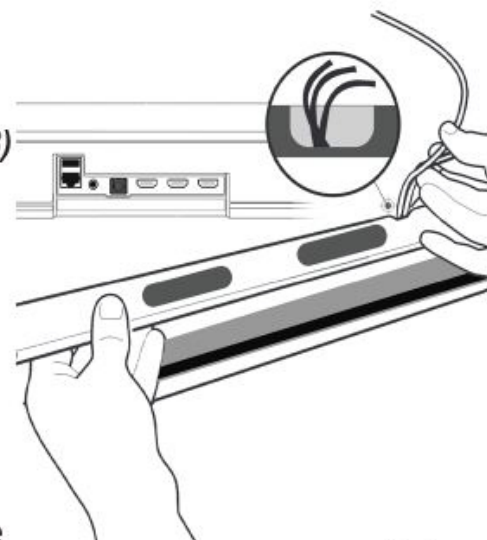


Fig. 3

- 7) NEVER run the power cable behind the wall

- 8) Place the soundbar inside the enclosure pulling the cable slack back up through the cable management notch and replace the front grille

## ELITE Series Closed Back UM1 Installation


1) *Very carefully lay the display face down on a soft surface making sure not to damage*

2) *Place the enclosure, with the front grille on, face down flush with the bottom of the display (Fig. 1)*

3) *Lay the UM1 bracket arms onto the back of the display so that the arms anchor holes pass over the displays threaded inserts. The UM1's slotted depth brackets should also overhang onto the back of the enclosure (Fig. 2)*

4) *Adjust the UM1 bracket arms until the depth support slotted bracket fits snugly onto the back of the enclosure. You will be able to fine tune the height, depth, and tilt at the end of the install (Fig. 3)*

5) *Lay your display wall mount bracket arms over the UM1 bracket arms and secure to the back of the display making sure that the bolts (not provided) pass through both the display wall mount bracket arms and the UM1 bracket arms (Fig. 4/5)*

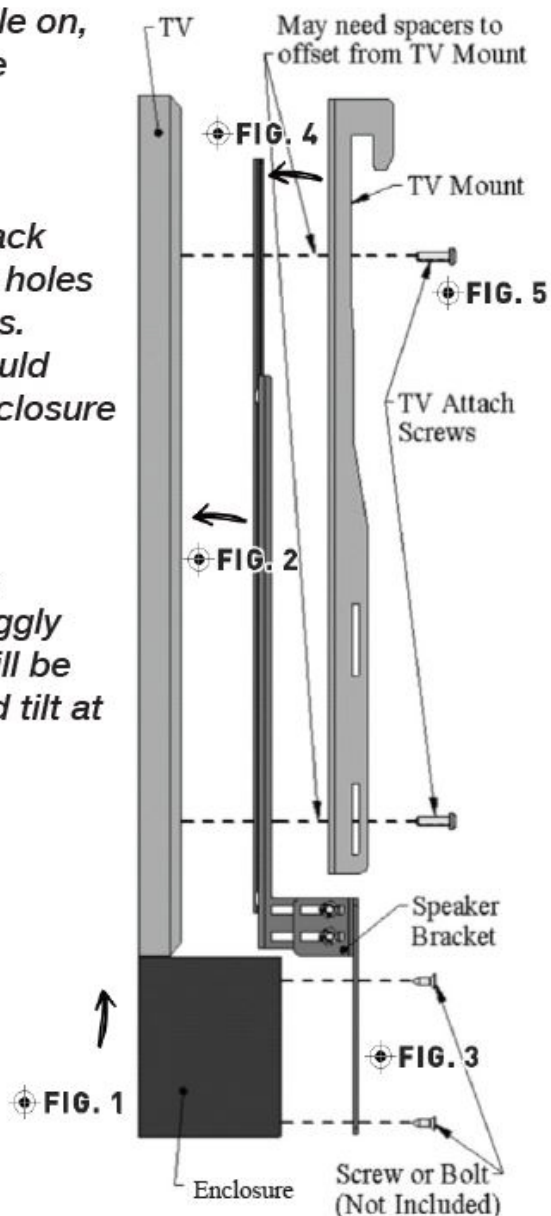


6) *Anchor the UM1's slotted depth brackets to the back of the enclosure using #10 1/2" screws and washers (provided in the UM1 box), two per bracket. You will need to pre-drill before anchoring the #10 1/2 screws (Fig. 3)*

# ELITE Series Closed Back UM1 Installation

Steps 1-6 should look like the picture below



- 7) *Unscrew the nylon nuts and remove the bolts securing the UM1's slotted depth brackets to the UM1 bracket arm and remove the speaker from the bottom of the display. The depth adjustment bracket arms should still be screwed into the back of the speaker*
- 8) *Lift and mount the display onto wall, following the instructions provided by the mounts manufacturer*
- 9) *Lift the enclosure and re-attach to the UM1 bracket arms with the bolts and nylon nuts that you removed in step 7*

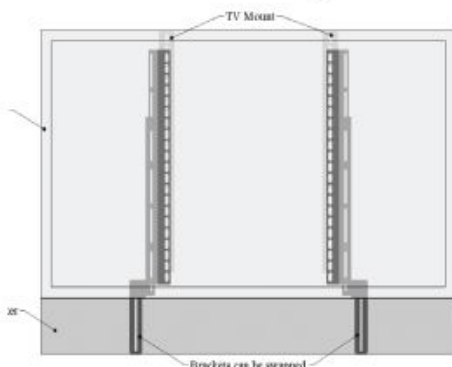

[nextlevelacoustics.com](http://nextlevelacoustics.com)  
tel + 617.237.2875  
[info@nextlevelacoustics.com](mailto:info@nextlevelacoustics.com)

- 10) *Adjust the height, depth, and tilt features of the UM1 bracket to achieve the desired look and then remove the front grille*
- 11) *Funnel the cables through the cable management notch and attach to the back of the soundbar. Place the soundbar inside the enclosure and pull the cable slack back up through the cable management notch. Re-attach the front grille*