


For Rough-In Kit Model: **CIB-IW6**

INSTALLATION GUIDE
Rectangular Rough-In Kit

← When utilizing the bracket vertically slide it along the straps to achieve desired position. →
The straps have perforations running their length with one inch spacing.

The bracket has a series of 8 indexing holes per strap location allowing it to be indexed at 1/8" intervals, as the bracket slides along the straps note that with each 1/8" of travel one of the 8 indexing holes comes into alignment with one of the 1" spaced holes on the strap. Sheet metal screws are provided to fix the bracket in the desired location.

Rectangular Brackets are furnished with straps 19" long.

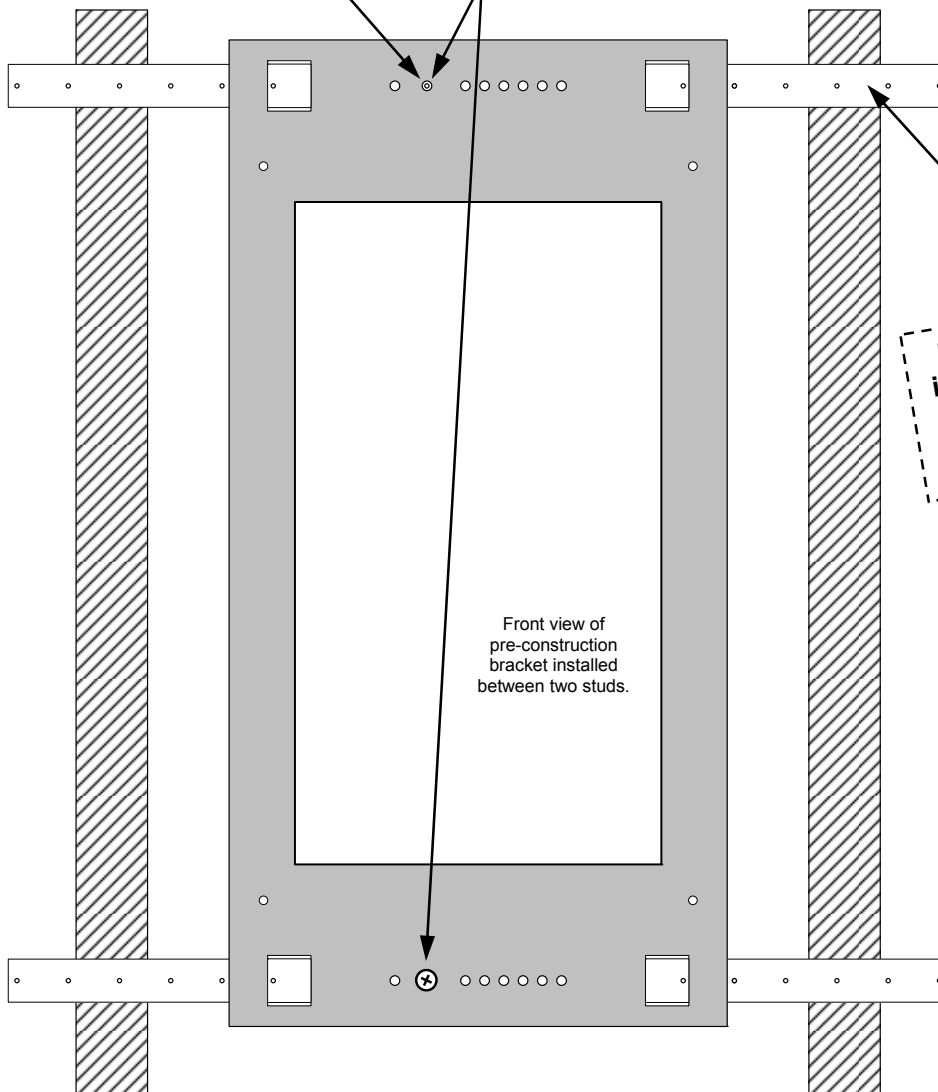

Be certain to use a LEVEL when installing rectangular brackets on walls or the final installation will most likely suffer!

Side view of pre-construction bracket.

