



ELITE Series Closed Back UM1 Installation

Steps 1-6 should look like the picture below

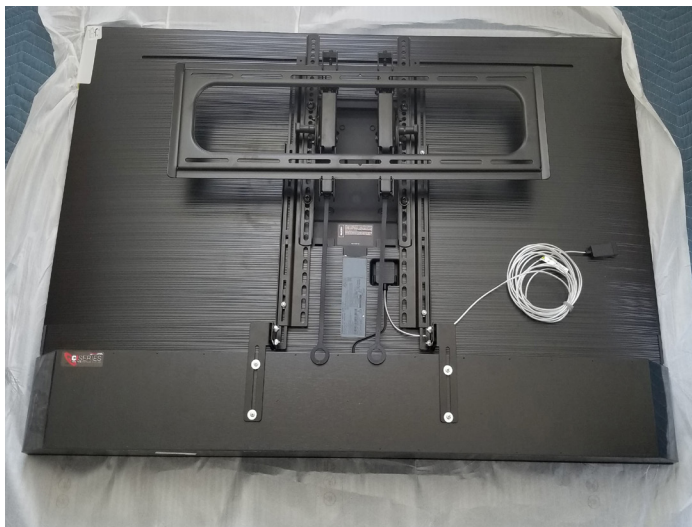

- 7) *Unscrew the nylon nuts and remove the bolts securing the UM1's slotted depth brackets to the UM1 bracket arm and remove the speaker from the bottom of the display. The depth adjustment bracket arms should still be screwed into the back of the speaker*
- 8) *Lift and mount the display onto wall, following the instructions provided by the mounts manufacturer*
- 9) *Lift the enclosure and re-attach to the UM1 bracket arms with the bolts and nylon nuts that you removed in step 7*

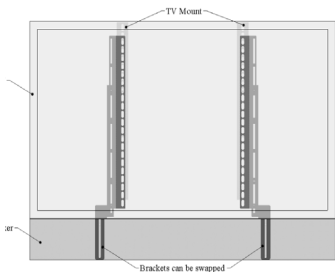

nextlevelacoustics.com
tel + 617.237.2875
info@nextlevelacoustics.com

- 10) *Adjust the height, depth, and tilt features of the UM1 bracket to achieve the desired look.*
- 11) *Place the soundbar inside the enclosure and wire the soundbar using the cable management notch. Re-attach the front grille*

NEXTLEVEL
ACOUSTICS

ELITE SERIES
ENCLOSURE INSTALLATION

ELITE Series Wall Mount Installation

- 1) With a stud finder find the position of the studs in the drywall and mark their location (Fig. 1)
- 2) Determine the optimal placement for the enclosure, based upon your desired look
- 3) Remove the front grille from the Elite Case
- 4) Pre-drill 4 pilot holes inside the enclosure (top and bottom), drive 4 screws and washers (2 top / 2 bottom) into the pilot holes ensuring that you hit the marked stud locations. If no studs in a location, use proper weight toggle bolts with applicable hardware

- 5) If you are unable to hit stud, ensure you use appropriate hardware rated to support the load)

- 6) Use the cable management notch to run the power cable, optical, ethernet and hdmi if applicable to the soundbar

- 7) NEVER run the power cable behind the wall

- 8) Place the soundbar inside the enclosure and replace the front grille

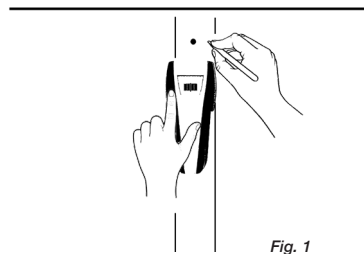


Fig. 1

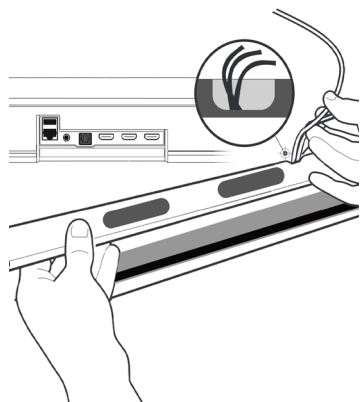


Fig. 3

ELITE Series Closed Back UM1 Installation

- 1) Very carefully lay the display face down on a soft surface making sure not to damage

- 2) Place the enclosure face down flush with the bottom of the display (Fig. 1)

- 3) Lay the UM1 bracket arms onto the back of the display so that the arms anchor holes pass over the displays threaded inserts. The UM1's slotted depth brackets should also overhang onto the back of the speaker (Fig. 2)

- 4) Adjust the UM1 bracket arms until the depth support slotted bracket fits snugly onto the back of the enclosure. You will be able to fine tune the height, depth, and tilt at the end of the install (Fig. 3)

- 5) Lay your display wall mounts bracket arms over the UM1 bracket arms and secure to the back of the display making sure that the bolts (not provided) pass through both the display wall mount bracket arms and the UM1 bracket arms (Fig. 4/5)

- 6) Anchor the UM1's slotted depth brackets to the back of the enclosure using #10 1/2" screws and washers (provided in the UM1 box), two per bracket. You will need to pre-drill before anchoring the #10 1/2 screws (Fig. 3)

