



Z-CLIP SPEAKER INSTALLATION

Fusion Series Z-Clip Mount

- 1) *With a stud finder find the position of the studs in the drywall and mark their location (Fig. 1)*
- 2) *Determine the optimal placement for the speaker, based upon your desired look*
- 3) *If a z-clip was pre-mounted to the back of the speaker, skip to step 5*
- 4) *Mount and level one of the z-clips to the back of the speaker using the provided #10 ½" screws (Fig. 2)*
- 5) *Mount and level the second z-clip to the wall. Hitting studs on horizontal speakers is recommended (Fig. 3)*
- 6) *For non-stud mounting, only use hardware rated to carry the weight of the speaker*
- 7) *Connect the speaker wires to the terminals located on the back of the speaker*
- 9) *If applicable, funnel the wires into cable management channels and cover w/ black tape*
- 10) *Install the rubber bumpers to the back of the speaker if desired*
- 11) *Lower the speaker mounted z-clip onto the wall mounted z-clip pushing any excess wire into the wall (Fig. 4)*

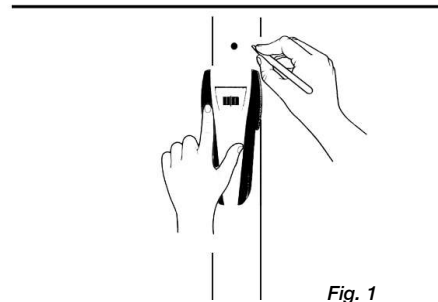


Fig. 1

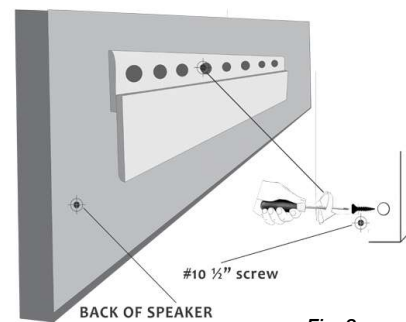


Fig. 2

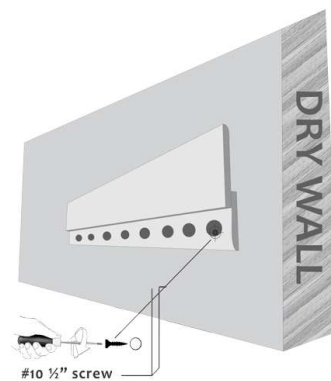


Fig. 3



Fig. 4